

◇ PLF DIN-Rail Socket Ordering Information

P L F - X 03

Coil Operation Voltage:

03: 3V, 04: 4.5V, 05: 5V, 06: 6V, 09: 9V, 12: 12V,
15: 15V, 18: 18V, 24: 24V, 48: 48V, 60: 60V

Internal Connections:

X: Diode + LED, Positive Pole "+" on A1 Terminal
V: Diode + LED, Negative Pole "-" on A1 Terminal

Install Type:

F: DIN-Rail Install with Screw Type Terminals
S: DIN-Rail Install with Screwless Type Terminals

Suit Relay Model:

L: LR Model

Item:

P: Socket

◇ DIN-Rail Socket List

No	Socket Name	Suit Relay Model	Note
1	PLF-X□□	LR	□□ for Coil Operation Voltage
2	PLF-V□□	LR	□□ for Coil Operation Voltage
3	PLS-X□□	LR	□□ for Coil Operation Voltage
4	PLS-V□□	LR	□□ for Coil Operation Voltage

Socket illustration

